

KUD50XG684AN
KUD55XG684AN
KUD65XG684AN



 
Quick Start Guide

Please read this manual carefully before TV operation.
Retain it for future reference.


●●Dolby
Audio

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

Package Contents

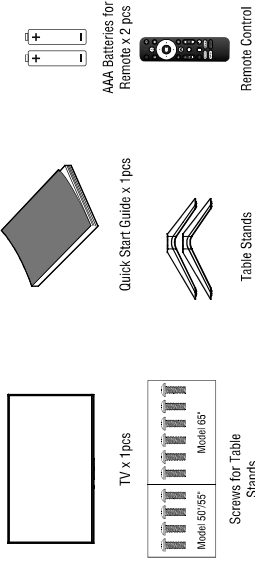

Wallmounting Installation (optional)

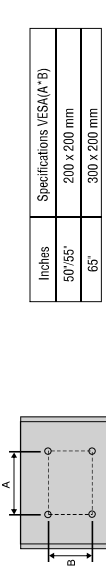 

Before installing the wall-mounted bracket, please screw the 4 wall-mounted adapter studs into the 4 wall-mounted nuts of the metal back.
The figures and illustrations in this manual are provided for reference only and may differ from their actual appearance.
Note: 1. The bracket fixed on the wall is an optional part.
2. When assembling the TV, there should be no other articles around it and please keep it distant from other articles.
3. When assembling the TV, please ask the professional worker to fix it in order to avoid danger.
4. The fixing picture is only for reference.
5. Please follow the user's manual about bracket assemble to fix the TV.
6. Attach the mounting bracket with the VESA compatible wall mounting kit.

PREFACE

1. Read this Quick Start Guide before starting Set-up.
2. Then, carefully follow the instructions, heeding all Warnings.
3. Do Not remove the TV back cover or block the TV ventilation openings.
4. Do Not use the TV near water or a heat Source.
5. Do not pinch or cut the Power Cord.

Note:
The product and illustrations in this user's manual is only for explanation purposes and may vary depending on model.

WARNING

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.

The plug or appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

 
Attach the Table Stands

How to assemble the stand

- If you need to remove or assemble the stand please read the following instructions.
- Before attaching/detaching the stand, make sure to turn off the TV.
- Before performing work, spread cushioning over the base area to lay the LED TV on. This will prevent it from being damaged.


Assembling instruction:

- Step1: Align the stand leg to the installation point, as illustrated.
- Step2: Tighten the screws (supplied) with a screwdriver to affix the stand to the panel, as illustrated.
- To disconnect the stand from the TV, perform the above steps in reverse order.

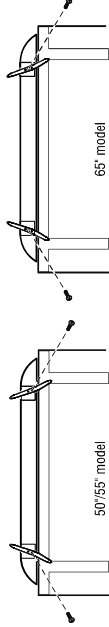

Front panel

 The buttons on the lower panel control your TV's basic features, including the on-screen menu.
To use the more advanced features, you must use the remote control.

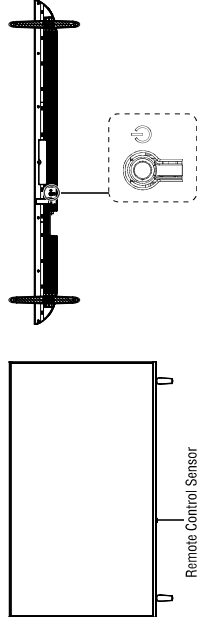

POWER(in the standby mode, press to turn on the TV.
In the boot state, short press to shut down.)

Unpack the TV and Accessories from the Carton Box

1. Please see the unpacking instructions on the top of the carton box (and below).
2. As noted, be careful not to grab or put pressure on the TV screen.
3. Check the carton box carefully for all included Accessories.



DO NOT

For 32" - 58"



UNPACK WITH CARE

For 65" - 75"



UNPACK WITH CARE

What You Will Need for Set-up (Not Included)

- Philips Head Screwdriver
- Internet Connection (Needed for Smart TV Streaming)
- Wireless Router (Needed for Smart TV Streaming)
- Computer, Tablet or Smart Phone (Needed for Smart TV Set-Up)

Specifications

Model	KUD50XG684AN	KUD55XG684AN	KUD65XG684AN
Display size	50" Diagonal (max.)	55" Diagonal (max.)	65" Diagonal (max.)
LED panel resolution	3840x2160		
Speaker output power	≥5Wx2		
Power supply	110-240V~, 50/60Hz		
Power consumption	110W	120W	200W
Standby consumption	≤1W		
Antenna input	75 ohms		
Controller power	DC 3V (Two AAA size batteries)		
Dimensions (LxWxH)	TV with stand 1110.6x242.3x709.2mm	1226.2x240.9x774.7mm	1446x287x896mm
	TV without stand 1110.6x78.2x640.4mm	1226.2x77.6x705.9mm	1446x78x638mm
Weight (Net weight)	TV with stand 7.3kg	9.75kg	14.4kg
	TV without stand 7.2kg	9.68kg	14.25kg
Work temperature	0°C-40°C		

 
NOTES:

- Design and specifications are subject to change without notice.
- Weight and Dimension shown are approximate.

Connect The TV

1. Insert the female end of the Power Cord into the back of the TV.
Then carefully plug the standard AC plug end into a 110-240V AC outlet.
2. If you are connecting other devices to the TV, utilize the appropriate optional cables and connect to the appropriate ports on the back or side of the TV.

Location of Connections

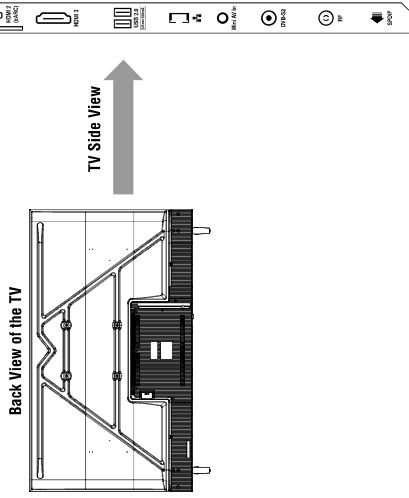


Back View of the TV

TV Side View

Remote Buttons

 1. **INPUT:** Press to open the input source list.
2. **POWER:** Turn the TV on and off.
3. **Profile:** Switch profile.
4. **Google Assistant:** Open Google Assistant.
5. **Settings:** Access the settings (direct or through the dashboard in GTV) from any place in the system.
6. **Arrow buttons pqur:** Use to select on-screen menu items and change menu values.
7. **OK:** Confirms selection.
8. **BACK:** Return to the previous menu.
9. **Guide:** Open Live TV EPG.
10. **HOME:** Display the HOME page.
11. ***** Button:** Press to open virtual keyboard in DTV source.
12. **LIST:** Press to display the channel list.
13. **INFO:** Press to display the channel information.
14. **VOL+/-:** Press these buttons to adjust the volume.
15. **MUTE:** Press this button to cut off the sound of the TV set temporarily, press again to resume.
16. **CH+/-:** Press these buttons to change channel upward or downward.
17. **NETFLIX:** If network connects, press this key to view NETFLIX directly.
18. **YouTube:** If network connects, press this key to view YouTube.
19. **Disney+:** If network connects, press this key to view Disney+.
20. **Prime Video:** If network connects, press this key to view Prime Video.

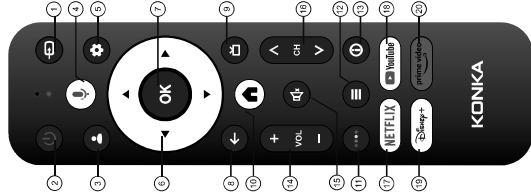

SET-UP THE TV (Using the Remote Control)

Initial Setup

1. Press the Power Button at the Top of the Remote.
Note: TV Controls on the TV are located on the bottom or on the side of the TV.
(If the TV is in Boot State, a long press on the Power Button under the TV might be necessary.)
2. You will need to Pair the Remote with the TV firstly. After the code is successful, you can use the Bluetooth remote control to operate the TV.
3. Press **▲▼** to select the system language and press OK to confirm the language.
4. Press **▲▼** to set up Google TV which need to sign in google account for Google service, or basic TV which not need to sign in google account.
5. Scan setup code to download Google home app on your phone to set up or press **▲▼** to set up on TV.
6. Press **▲▼** to select the wifi to connect, press OK and enter the password to confirm the connection is successful.
7. By accepting the Google Terms of Service to improve the product experience, select "Accept" to accept this condition.
8. Once the Set-up is finished, to exit Google TV and access another component such as a Cable Box, press the Input button.

Navigating the ON-SCREEN MENU

In the HOME interface, press the **▲▼◀▶** key to select the icon of the circular settings menu, and press OK to adjust.
After finishing your adjustment, press BACK button to return to the previous menu.

TV label	Cable	External Equipment
ANT/CABLE /DVB-S2		Antenna Satellite Receiver
HDMI		VIDEO EQUIPMENT
Mini AV in	 VIDEO Yellow Red AUDIO Red	Camcorder
USB		CI
SPDIF		Audio Receiver
HEADPHONE		
LAN		

 
The TV can be connected to the following devices: Cable Box, Satellite Box, Antenna, Video Game, Stereo System, Sound Bar, Headphones, Blu-ray Player, DVD Player, VCR, Streaming Box or Stick, Camcorder, etc.

7

Prepare The Remote Control

Installing Batteries

1. Open the battery compartment cover on the back side.
2. Insert two 1.5V AAA size batteries in correct polarity. Don't mix old or used batteries with new ones.
3. Closed the cover.

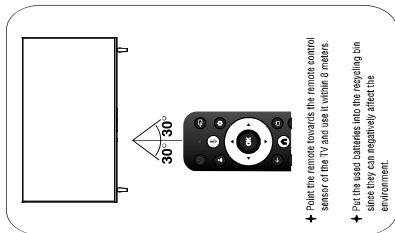

Trouble Shooting

Having trouble?

Don't worry, it's usually an easy fix.

After Auto Tuning only some channels are available	Check your area is covered by Digital Video Broadcasts. Try re-tuning or manually tuning missing channels. Check that you are using the correct antenna type.
Channel cannot be selected	Check if the channel has been blocked in the main menu settings.
USB not playing	Please check connecting USB cable and power supply is connected. Hard drive has not been formatted. Please make sure USB disk is compatible and the multimedia data formats are supported.
Picture is distorted, macroblock, small block, dots, pixelization, etc	Compression of video contents may cause distortion especially on fast moving pictures such as sports and action movies.
Noise from speaker	Check cable connections, make sure a video cable is not connected to an audio input. Low signal level may cause sound distortion.
TV turns off automatically	Check if the Off Timer is set to On in the Setup menu. Sleep Timer may have been enabled. If there is no signal for about 10 minutes from an input, the TV will turn off.
TV turns on automatically	Check if the On Timer is set to On in the Setup menu.
Picture is not shown in full screen	Black bars on each side will be shown on HD channels when displaying SD (4:3) contents. Black bars on Top & Bottom will be shown on movies that have aspect ratios different from your TV. Adjust picture size option on your external device or TV to full screen.